# CORNING WARE

promise

Corning promises to replace without charge the glass-ceramic part of any CORNING WARE® product that ever breaks from temperature extremes. Furthermore, any imperfect part will be replaced within one year from date of purchase. Return the pieces to a CORNING WARE® products dealer.

### FOR REPLACEMENT AND SERVICE

Local CORNING WARE product dealers are authorized to give prompt replacement of defective parts covered by the Corning promise. Return only the defective part.

Dealers are also encouraged to keep parts available for purchase when the product is not covered by the Corning promise.

For information, parts not available or service to out-of-warranty parts, write to: Corning Glass Works, Consumer Service Dept., Consumer Products Div., Corning, New York 14830. Also state problem, part and model no.

CORNING WARE® is a Registered trademark of Corning Glass Works, Corning, New York 14830.

important tips on care and use of your new

CORNING WARE

percolators and beverage makers

# good coffee the corning way

CORNING WARE® percolators have been designed to make it easy to brew consistently good coffee and other beverages. Keep these tips on care and use handy for future reference.

The following method makes excellent coffee and is easier to time perking action.


- Fill percolator bowl to marking for desired number of servings with fresh cold water. A coffee serving is 5 ounces of finished brew. The markings on the inside of the bowl are for 5½ ounces of water per serving, not 8 ounces. This allows ½ ounce for absorption by the coffee grounds and for evaporation. Place percolator on high heat.
- Two Moisten basket to help prevent fine grounds from going into brew. Referring to coffee brand label for amount, measure regular or percolator grind coffee into basket.
- THREE Place basket on pump stem and turn to right or clockwise (see illustration). Always lock cover onto the basket. Place cover on basket and fasten by turning right or clockwise to lock position. To insure a tight fit, be sure inside upper rim of basket is free of coffee grounds. Failure to lock cover securely may make disassembly hazardous.
- When water in percolator boils, remove from the heat. Place basket assembly in percolator with indented area of cover about halfway between handle and pouring lip on left side of bowl. Turn cover gently to right or clockwise to fasten. The indented pouring area of cover will match pouring lip.
- Place percolator on the lowest heat that will maintain a gentle perk. Perking starts immediately. Perk for 6 to 8 minutes. (If coffee perks rapidly it boils and it may taste bitter.)
- Remove from heat. When coffee stops perking, allow coffee to drain from basket (2 minutes) before serving. Coffee can be kept piping hot for serving by leaving on lowest heat setting. After one hour, however, coffee loses flavor rapidly. For best results, never brew less coffee than the lowest serving marking (¾ capacity).



### to serve

If you choose to remove basket before serving, unlock cover from bowl by turning it to the left or counter-clockwise. Lift out coverbasket-pump. Cool basket with cold water for safe handling. To unlock cover from pump basket assembly, turn the cover left or counter-clockwise. Rinse sediment from inside of cover. Replace cover and lock it on the percolator bowl by placing indented area about halfway between handle and pouring lip on left side of bowl. Turn cover to right or clockwise to lock in pouring position.

# how to take apart your percolator

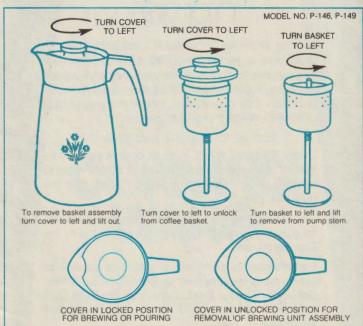

As a safety precaution, this percolator cover has been designed to stay on when pouring and to prevent hot coffee from gushing out if the pot is accidentally tipped over.

## corning ware beverage makers

### INSTANT COFFEE

ONE Measure fresh cold water and coffee into server. (Use the quantities recommended on the coffee package.)

Two Stir to blend.

THREE Bring just to a boil, but do not continue boiling.

FOUR Serve.

TEA AND OTHER BEVERAGES Follow directions on food package.

## care and cleaning

Because great coffee begins with a clean coffeemaker, CORNING WARE® percolators and beverage makers have been designed for ease in cleaning. The hard, smooth surface of the glass-ceramic material will not absorb oils or react to detergents. After each use, all parts should be cleaned with detergent and water by hand or in a dishwasher. Plastic parts may turn dull from frequent cleaning in a dishwasher, however. Use dishcloths, Dobie, Skruffy, or Tuffy cleaning pads. Avoid harsh cleaning products which may mar the smooth surface. If not washed after every use and soil builds up, special treatment restores the clean appearance:

PROBLEM	SOLUTION
Gray marks caused by metal utensils or parts	Use a mild abrasive cleaner such as Zud or Delete®
Hard water deposits (feel rough)	Fill bowl with solution of 1 cup vinegar to 1 cup water. Boil for about 20 minutes.
Coffee or tea oils (feel smooth)	Fill bowl with 2 tablespoons liquid chlorine bleach for each cup of water, heat.
Discolorations .	Scour with baking soda and damp cloth or paper towel.
	Place 1 tablespoon dishwasher detergent in bowl, fill with hot tap water, allow to stand overnight.

### caution

Never mix household cleaning products. Chemical mixtures may interact, causing objectionable or even hazardous results. In particular, vinegar and chlorine bleach should never be mixed. A gas will form which may injure the lungs if inhaled.